



	FR	EN	DE	NL
Figure 1	Clipsé sur rail DIN - vue de face	Clipped to DIN rail - front view	Auf DIN-Schiene geclipst - Vorderansicht	Geclipst op DIN-rail - vooraanzicht
A	Bouton poussoir déconnexion backup	Disconnect backup push-button	Drucktaster für Backup-Trennung	Drukknop voor back-up loskoppelen

	FR	EN	DE	NL
Figure 2	Clipsé sur rail DIN	Clipped to DIN rail	Auf DIN-Schiene geclipst	Geclipst op DIN-rail

	FR	EN	DE	NL
Figure 3	Fixé sur plaque de montage	Fixed on mounting plate	Befestigung auf Montageplatte	Vast op montageplaat

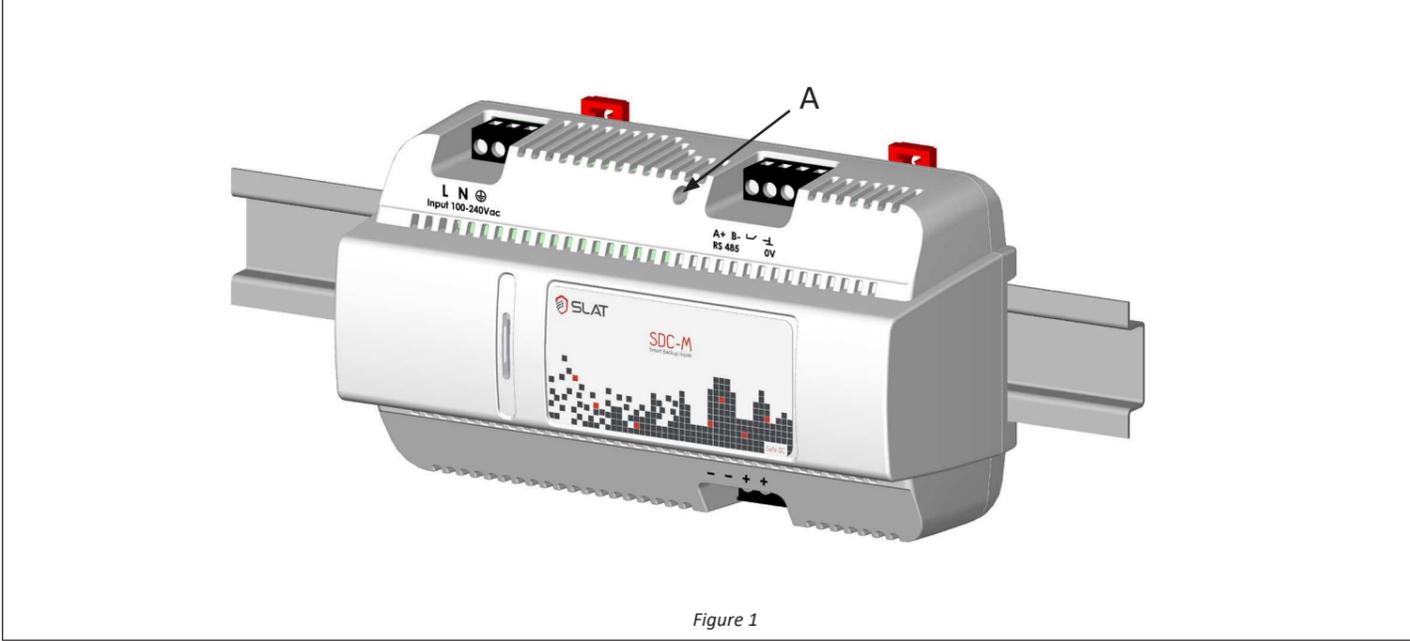


Figure 1

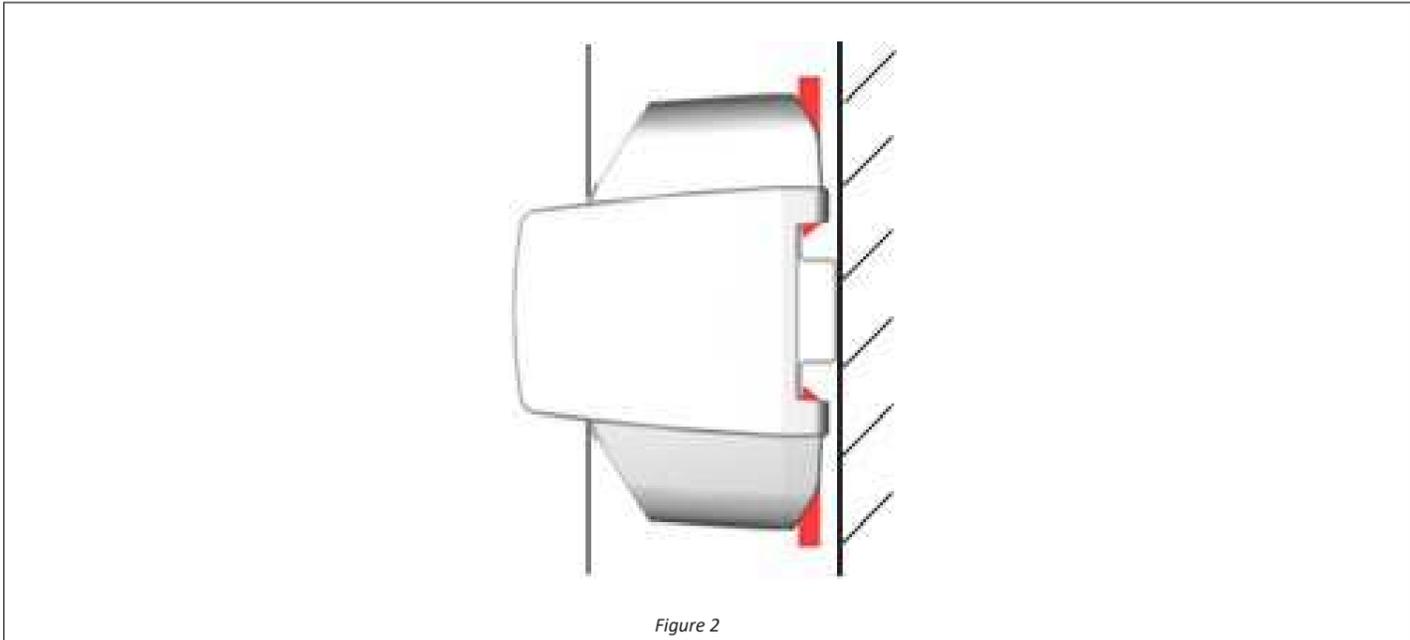


Figure 2

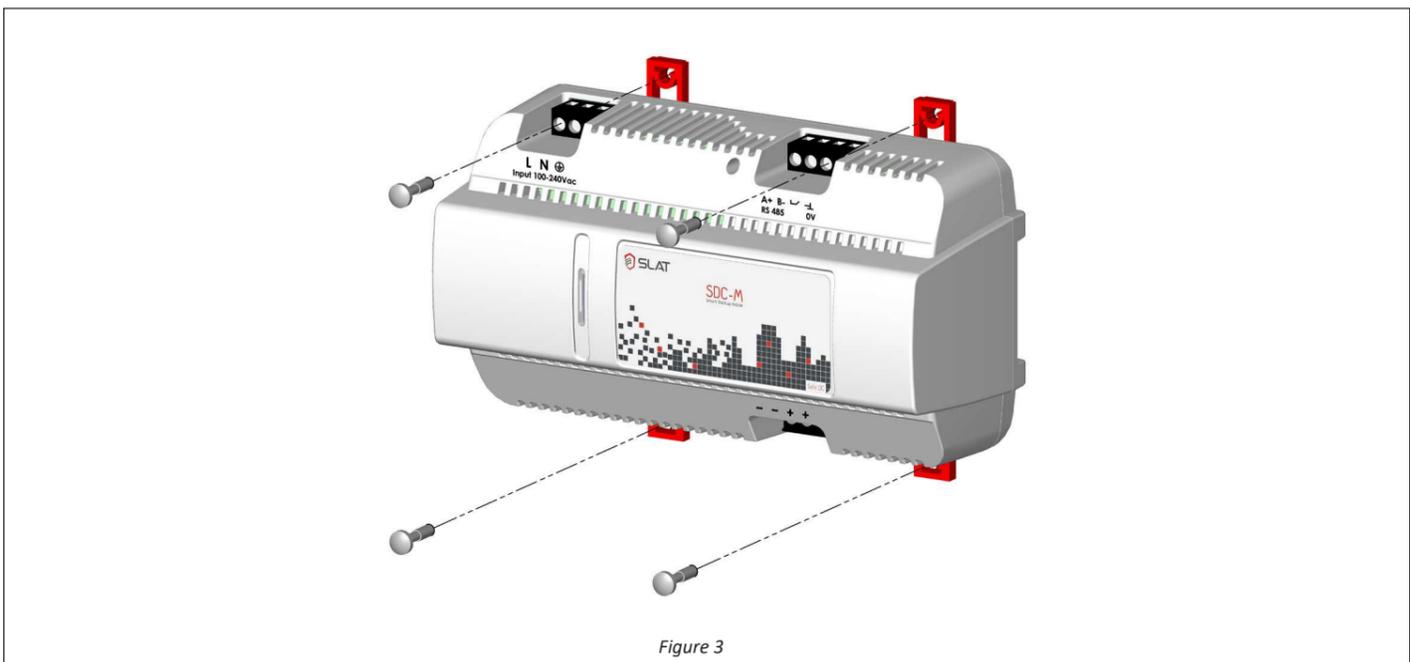


Figure 3