



	FR	EN	DE	NL
<b>Figure 1</b>	Montage mural	Wall mounting	Wandmontage	Wandmontage

	FR	EN	DE	NL
<b>Figure 2</b>	Switch anti arrachement (en option)	Tamper switch (optional)	Wandentfernungs-Erkennungsschalter(optional)	Wand afstand detectie schakelaar (optioneel)

	FR	EN	DE	NL
<b>Figure 3</b>	BOX2 30W	BOX2 30W	BOX2 30W	BOX2 30W
<b>A</b>	Entrée	Input	Eingang	Ingang
<b>B</b>	Bouton poussoir déconnexion backup	Disconnect backup push-button	Drucktaster für Backup-Trennung	Drukknop voor back-up loskoppelen
<b>C</b>	Communication	Communication	Kommunikation	Communicatie
<b>D</b>	Sortie	Output	Ausgang	Uitgang

	FR	EN	DE	NL
<b>Figure 4</b>	BOX2 55W	BOX2 55W	BOX2 55W	BOX2 55W
<b>A</b>	Entrée	Input	Eingang	Ingang
<b>B</b>	Bouton poussoir déconnexion backup	Disconnect backup push-button	Drucktaster für Backup-Trennung	Drukknop voor back-up loskoppelen
<b>C</b>	Communication	Communication	Kommunikation	Communicatie
<b>D</b>	Sortie	Output	Ausgang	Uitgang

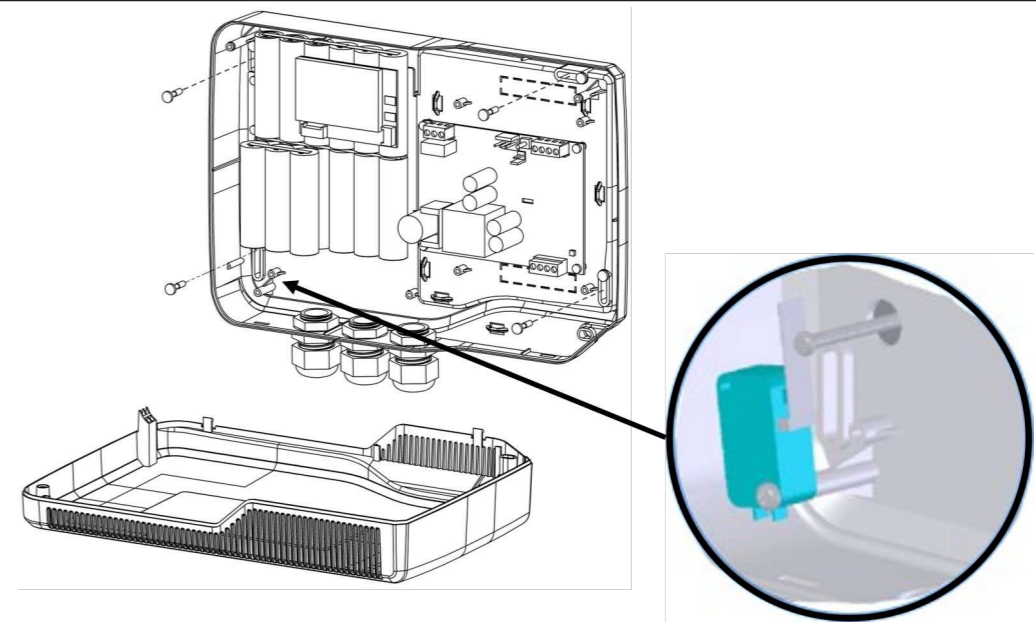


Figure 1

Figure 2

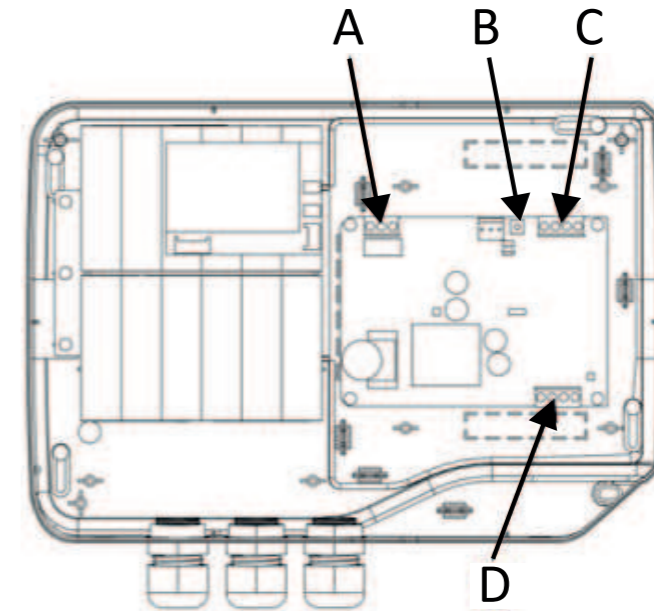


Figure 3

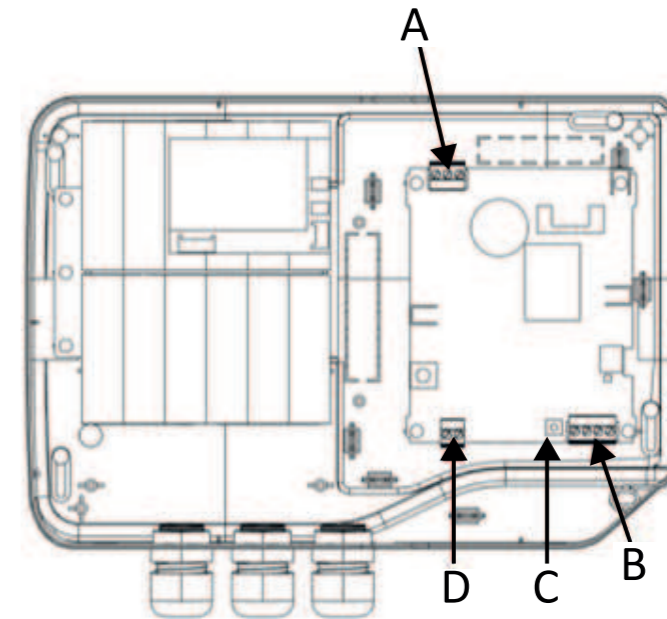


Figure 4